


DATA SHEET

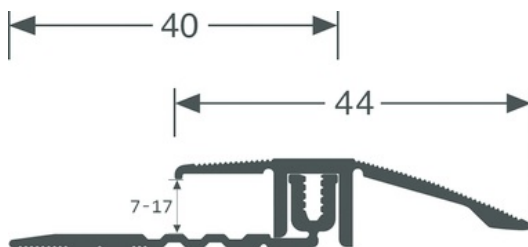

DESCRIPTION

to make a transition between 2 floor coverings of different levels
 Drilled - countersunk: to be screwed
 5 holes, first one at 65 mm.
 Holes are drilled, countersunk and deburred
 Supplied with screws and plugs

USE

For overlapping a floor covering or a parquet or concrete floor.
 Indoor use

REFERENCE

Ref : 1250

MATERIAL

REACH compliant
 Fire rating: Bf1 s1 - EN14041 standard

FITTING MODE

Position the profile base, leaving an expansion gap. Locate the holes and drill into the concrete. Place the plugs, screw the base. Screw the cover onto the base to ensure a good connection.

> MAINTENANCE

For daily cleaning, use standard detergents. In case you want to use a sodium, ammoniac or acid based cleaner, carry first out a preliminary test.

The information contained in this document is provided for information purposes. Romus cannot be held liable for this information. The user or specifier will check the compatibility of the product technical data with the actual situation. Romus reserves the right to modify all or part of this document without prior notice.

Architect :

Project :

Email :

Tel :

Distributor :

Tel :

Email :